
1/CONNECT

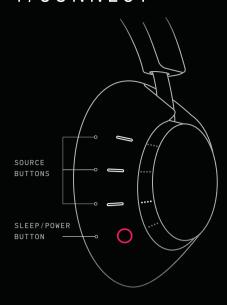

GET STARTED

- For first-time use: To turn on and enter pairing mode, press and hold the Sleep/Power Button for three seconds.* The lowest Source Light will begin to pulse. Go into your device's Bluetooth® settings and select Dolby Dimension™ to pair.
- Pair more devices: Press and hold a specific Source Button for three seconds to pair and assign a device to that button.
- Wake/connect: Short press one of the three Source Buttons to wake Dolby Dimension and automatically connect to its previously paired device.

*Dolby Dimension may need to be charged upon unboxing.

SLEEP AND POWER

- Enter sleep mode: Short press the Sleep/Power Button to enter sleep mode and disconnect from your current device.
- Power on/off: Press and hold the Sleep/Power Button for three seconds.

SOURCE LIGHTS

- One steady light: Device connected
- -- One pulsing light: Pairing mode
- **Ξ Three cycling lights:** Select a device

Manage up to eight Bluetooth devices in the Dolby Dimension app.
--

2/CONTROL




TOUCH CONTROLS

- Dolby LifeMix™: Tap twice to go from hearing a perfect blend of your entertainment and life around you (Transparency), to shutting out the world (Active Noise Cancellation).
- Play/pause: Tap once.
- Volume control: Swipe up/down.
- Next/previous: Swipe forward/back.
- Activate Siri or Google Assistant: Press and hold the Control Plate for three seconds.
- Accept/end call: Tap once.
- Reject call: Press and hold.

	Adjust LifeMix, Virtualization, and Head
	Tracking settings in the Dolby
$\overline{}$	Dimension app.

3/CHARGE

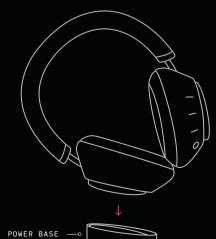

AT HOME

Rest the left ear cup on the Power Base to charge Dolby Dimension. Get a full charge in about two hours, and enough power in 15 minutes to watch a movie.

To set up charging, please firmly insert the end of the micro USB cable, Dolby logo side up, into the Power Base.

POWER LIGHT

- -- Pulsing orange: < Two hours battery left
- -- Pulsing white: > Two hours battery left
- Steady white: Fully charged

ON THE GO

Plug a micro USB cable into the right ear cup.



Turn low power mode on/off in the Dolby Dimension app.